



# ELEVATOR PHOTOS

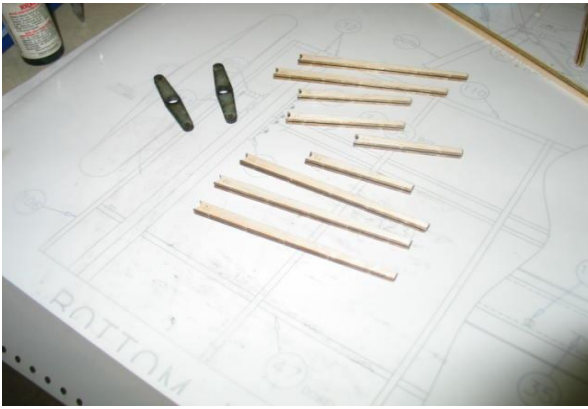

Rib parts ready to be glued together




Control horn pieces ready for glue

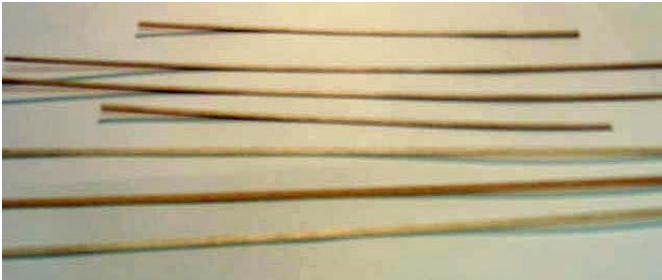


Plywood and balsa outline parts




Laminated outline parts taped in place

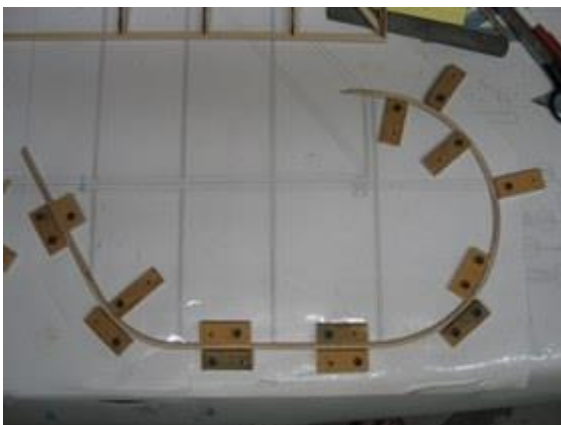


Laminated outline parts in place

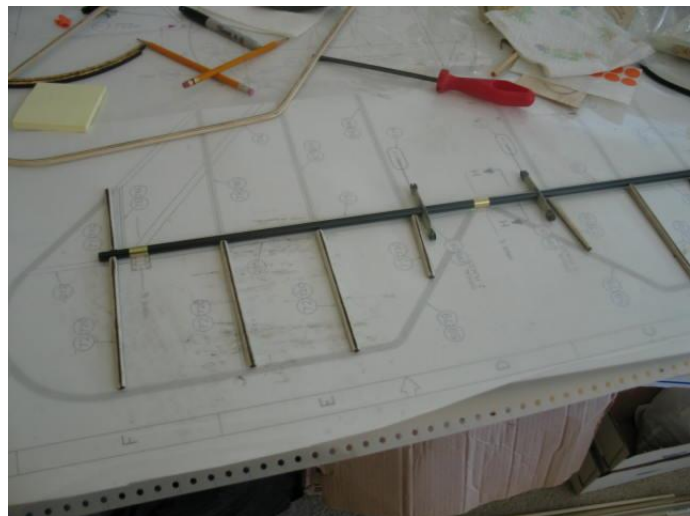


Ribs, hinges and control horn test fitted

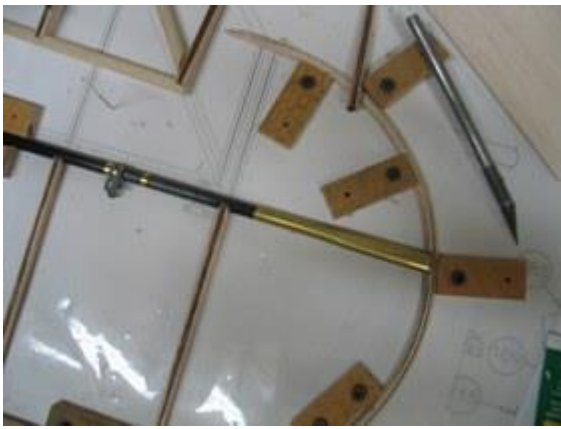


Brass ends crushed and installed

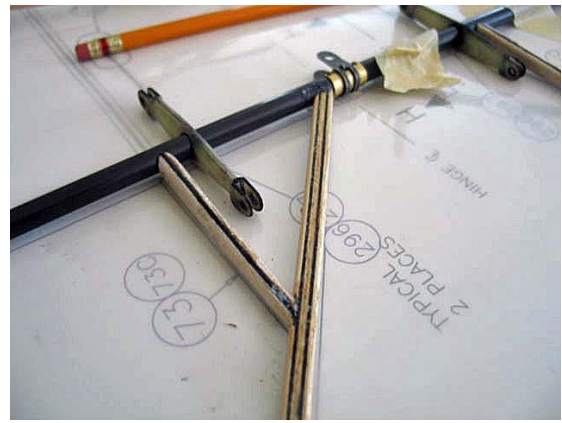


Close-up of inner rib and outline

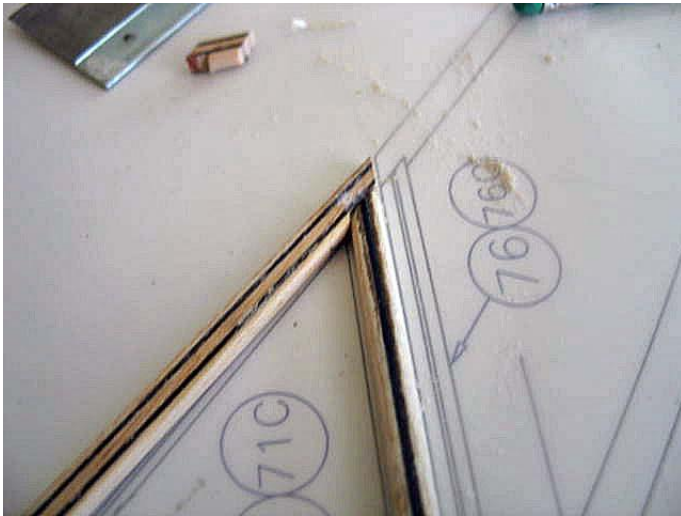


Close up of elevator tip

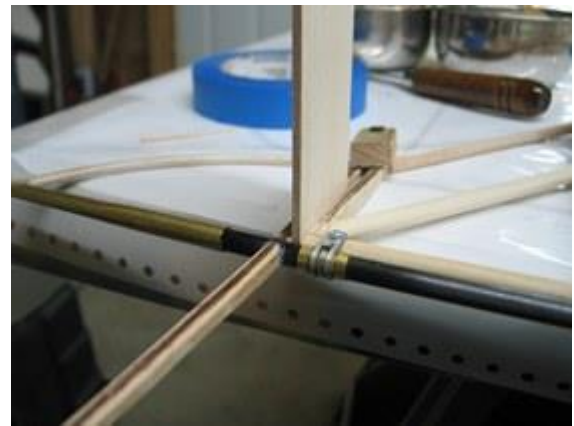

Set gap between elevator tip and stabilizer

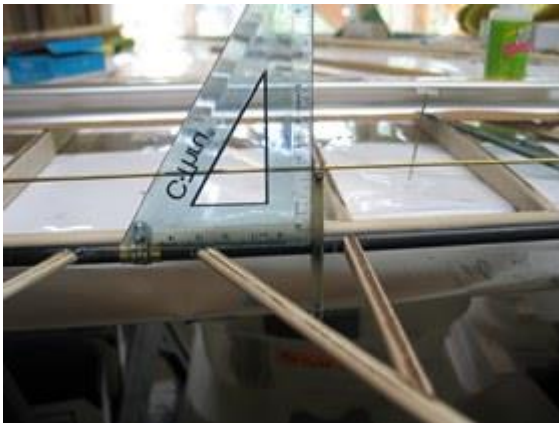

Use triangle align control horns

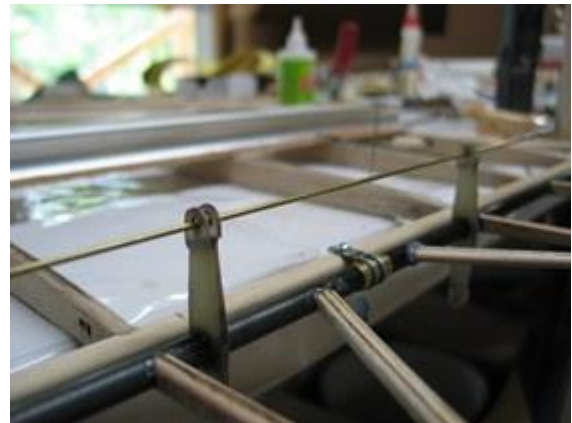

Use spare rod align control horns



Control horns glued in place



Test fit elevator to stab; fix any warps



Completed elevator