



SUBWING and STRUT PHOTOS

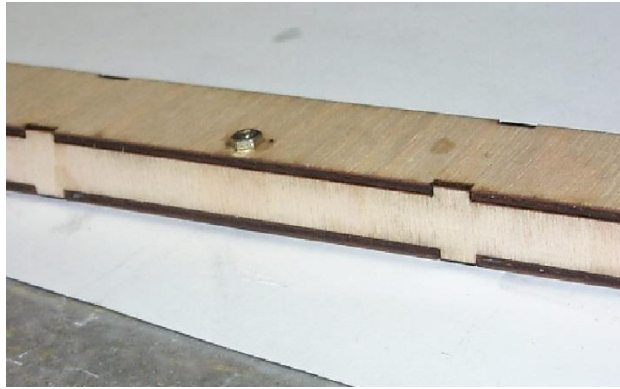


Glue spar box pieces #34 and #35 together

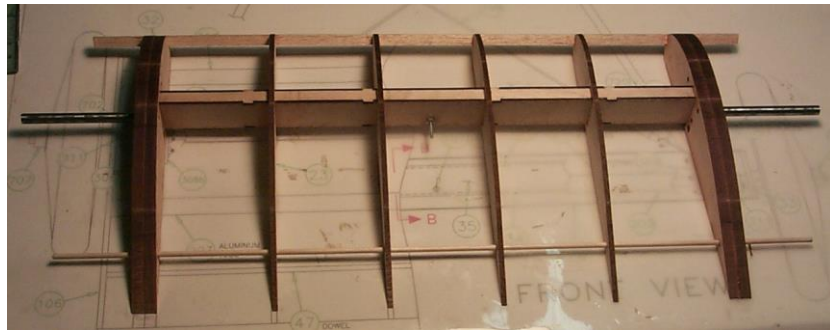

Glue, place ribs #23, #32, dowel #47, leading edge #110



JB-Weld music wire #310 in struts

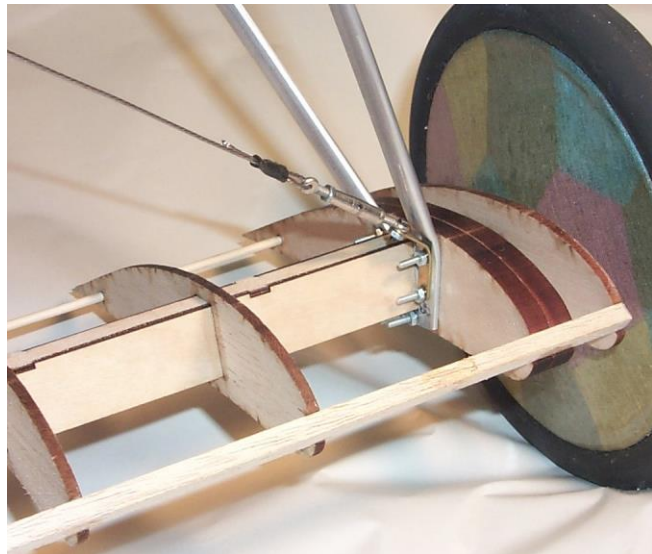

Install struts, fitting #309, turnbuckle, cable



Install bungee cord and outer rib



Cut slots in plywood covering for struts



Wrap plywood sheeting around subwing




Plywood sheeting and strut #307, #308



Mount landing gear with j-bolts #301



Center tripod strut #315 in position

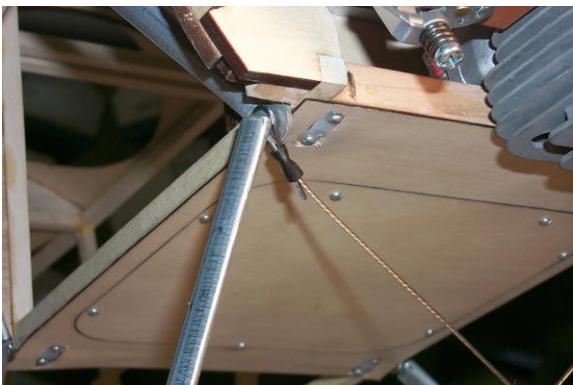


Wrap cable #708 in-between struts



JB Weld, tape music wire, rear strut in place



Add strap and install rear strut #316

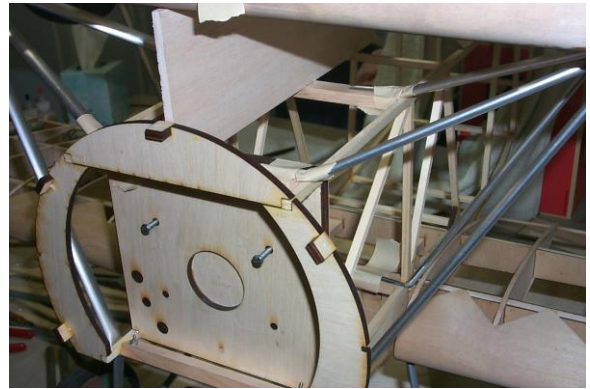

JB Weld, tape music wire, tripod struts in place



Position, align tripod struts to top wing




Align/join struts #326, #327 and #316




Drill 9/64" holes in struts for top wing



Paint all struts with Rust-O-luem

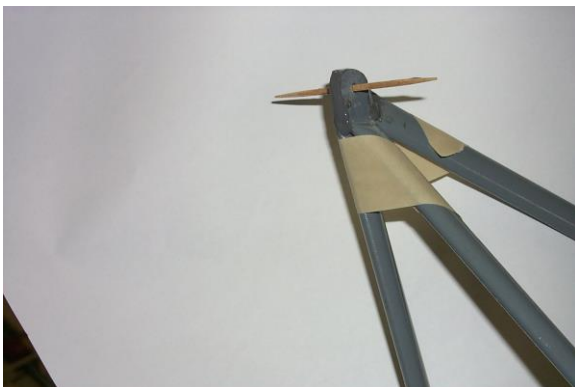

Join tripod struts with JB Weld

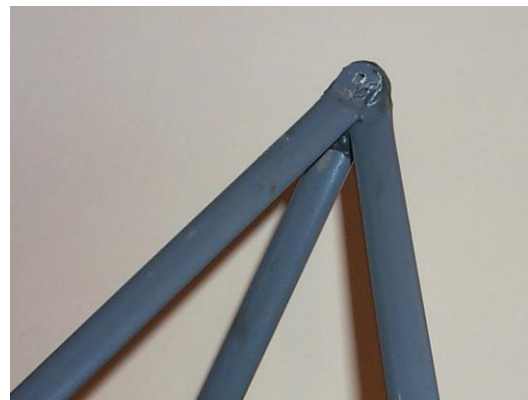

Painted and welded tripod struts